





















Window Stop Selector

Window Stop Products		Mounting	Emergency Escape	Works on these Windows			Re-locks Automatically	Meets ASTM Standard	Potential Risks	
Use Window Stops to limit window opening to 4 inches or less.				Single Hung	Double Hung	Slider	Casement or Awning			Stops can be bypassed ~ may risk child falling
	KidCo Window Stop	Attaches permanently with 2 screws	Pull back on stop to open window fully	✓	✓	✓	No 	✓	✓	
	Cresci Window Wedge	Plastic wedge attaches with sticky back velcro	Remove wedge	✓	✓	✓	No 	No 	No 	Be sure Wedge is lodged in or it may slip
	Parents Unit Super Stopper	Rubber suction cup sticks on window	Remove stopper	✓	✓	✓	No 	No 	No 	May need 2. Can slip out of place
	Safety 1st Window Lock	Attaches permanently with 2 screws	Slide button to right and pull locking arm toward you	Works only on right side of frame ✓	✓	Works on windows that slide to left ✓	No 	No 	No 	Must be installed on Right Side of window frame
	Thumb Screw Security Lock	Screws over window track, installs with pliers	Not if installed with pliers. Not intended for child fall prevention	✓	✓	✓	No 	No 	No 	May fall off - Risk of Choking Hazard if removed
	Window Opening Control Device (WOCD)	Order with new window purchase	Push on one or 2 latches to disengage	✓	✓	✓	No 	✓	✓	